


# ELECTRIC ADJUSTABLE TABLE BASE USER GUIDE



ergonomic  
solutions

Workplace comfort. **Simplified.**

## WELCOME TO YOUR ELECTRIC ADJUSTABLE TABLE HEIGHT ADJUSTMENT GUIDE

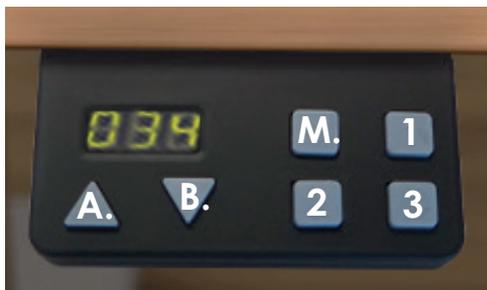

- A.** UP
- B.** DOWN
- M.** SETTING
- 1.** MEMORY 1
- 2.** MEMORY 2
- 3.** MEMORY 3

### MANUAL HEIGHT ADJUSTMENT

Press and hold UP/DOWN arrow to adjust height of the top.



### PRE-PROGRAMMED HEIGHT ADJUSTMENT

Raise or lower table to pre-programmed height.

Press and hold button **1**, **2**, or **3**

Once the surface reaches the pre-set height, the table will stop moving.

\*Number button must be held until the surface reaches the pre-set height. When the button is release, the surface will stop moving.

### POWER SAVING MODE

The programmable Switch goes into a low power consumption mode after 30-60 seconds of non-use.

To reactivate the Switch, press the up or down button and then choose the memory setting.

## SETTING PRE-PROGRAMMED HEIGHT ADJUSTMENT

When setting the three memory options of the Digital Switch, it is **IMPORTANT** to listen to the tones coming from the Control Box.

1. Press the  button approximately 5 seconds.
  - a. Two short beeps followed by a CONTINUOUS beep.  
**Continuous beep (beeeeeeeeeeeeeeeeeep) tone will be heard continually during programming.**
  
2. Press  to move surface up to 1st preferred height.
  
3. Press  to set.
  
4. Press  to move surface up to 2nd preferred height.
  
5. Press  to set.
  
6. Press  to move surface up to 3rd preferred height.
  
7. Press  to set.
  
8. Press the  button approximately 5 seconds.
  - a. **Continuous beep tone will stop.**
  
9. The memory settings are now complete.

**WATCH THE VALUE ELECTRIC  
USER GUIDE VIDEO HERE**



## ELECTRIC ADJUSTABLE TABLE BASE TROUBLESHOOTING GUIDE

1. Ensure the Surface is completely level.
2. Disconnect all cables and A/C power cord.
3. Reconnect cables and then A/C power cord.
4. **CONFIRM** all cables are plugged in **TIGHTLY**.  
(Up/Down movement can loosen the cords).
5. **STOP**
6. Ensure the On/Off switch is in **ON** position.
7. **PERFORM ZERO SETTING AND INITIALIZATION**
  - a. Hold **BOTH** Up and Down buttons for 10 seconds.  
Base will start to lower.
  - b. A click will be heard once the base reaches the lowest position and movement will stop.
  - c. **DO NOT** release buttons until the base has stopped moving completely.
8. Base can now be adjusted to desired height.

### IF ONE OF THE LEGS IS STILL NOT WORKING...

1. Remove and switch the two motor cables which are connected to the legs.
2. **STOP**
3. Follow **ZERO SETTING AND INITIALIZATION** in Step 7 above.
4. If the non-functioning leg is working, but the other is no longer working:
  - a. the **CONTROL UNIT** is causing the issue.
5. If the non-functioning leg is still not working after switching the cables:
  - a. the **LEG** is causing the issue.