



SETUP INSTRUCTIONS - LOCKABLE CPU HOLDER

1. **Remove the Adjustable Support Bracket**
 - lift up and pull forward

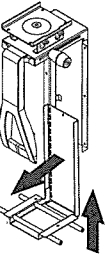


2. **Install the Rear Sliding Rod**
 - slide into tubes on adjustable foot support
 - make sure bent loop is facing up

(Note: Side that is facing the wall or back of desk)

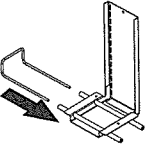


3. **Position the Rear Sliding Rod**
 - place CPU on a firm surface on its side
 - center computer on the CPU
 - push the sliding rod until it touches the back of the CPU
 - insert a set screw into the threaded hole in tube
 - tighten the set screw with Allen key provided

(Note: DO NOT overtighten the set screw)

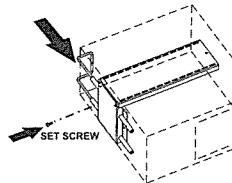


4. **Re-install the Adjustable Foot Support**
 - measure CPU height
 - position adjustable foot support within fixed support

**Position based on a 1" max. gap between the CPU and the fixed support bracket*

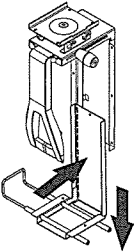


5. **Insert the Computer**

6. **Install the Front Sliding Rod**
 - push the rod until it touches the computer

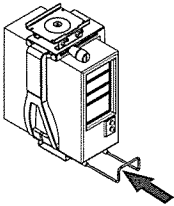


7. **Tighten the Front Sliding Rod**
 - insert a set screw into the threaded hole in the tube
 - tighten the set screw from underneath


(Note: At this point the computer should not be able to slip either forward or backward)

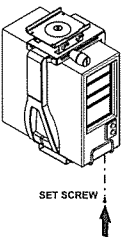


8. **Secure the Computer**
 - slide the plastic retaining arm towards the computer, pushing inwards from the top
 - hold in position
 - tighten the knob (turn clockwise)

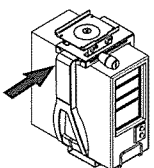

 9. **Lock the Knob**
 - hold the knob
 - turn the key clockwise to lock
 - align with triangle
 - remove key



LOCKED

 

UN-LOCKED