



Instructions

FLEXCHARGE9 RING Switching out the plastic cover ring

REMOVING THE OUTER COVER RING:

1. Make sure the unit is unplugged from any power source.
2. Place your hands on both sides of the FlexCharge9 unit.
3. Use your fingers to pry the ring off of the FlexCharge9. The ring will lift off from the unit.



4. The FlexCharge9 will look like this without the outer ring:



INSTALLING THE OUTER COVER RING:

1. Make sure the unit is unplugged from any power source.
2. Line up the ring protrusions with FlexCharge9 holes as seen below.



3. Ensure that the ring is centered on all tabs and completely level.
4. Place your hands on either side of the unit. Gently press down on the unit to secure the ring into place.
5. The FlexCharge9 is now ready to use.