

# Acrylic Modesty Panel

## INSTALLATION INSTRUCTIONS

**NOTE: Inspect the contents of the box for shipping/ handling damage. Make sure you have all the parts before proceeding.**

**ASSEMBLY TOOLS REQUIRED:**

- #2 Phillips Screwdriver
- or
- Power Driver with #2 Phillips Bit
- Tape measure
- Pencil

**PARTS INCLUDED:**

Item	Description
1	Modesty Brackets
2	Acrylic Modesty Panel



**INSTALLATION INSTRUCTIONS:**

- Using a Tape Measure and Pencil locate and mark a centerline on the bottom side of the worksurface. Reference the Table below to identify the Modesty Bracket hole to hole spacing. From the front edge of the worksurface measure and mark the desired location of the Modesty Brackets.

Nominal Modesty Panel Width	Actual Acrylic Panel Width	Modesty Bracket Hole to Hole Spacing
24in	22in	10in
30in	28in	16in
36in	34in	22in
42in	40in	28in
48in	46in	34in
54in	52in	40in
60in	58in	46in
66in	64in	52in
72in	70in	58in


**NOTE: Use caution when identifying the Acrylic Modesty Panel mounting location. Be sure to take into consideration the space needed for accessories such as monitor arms, screens and or power.**

- Using a #2 Phillips Screwdriver or Power Driver with #2 Phillips Bit attach the Modesty Brackets using the provided screws. Utilize the slotted hole in the Modesty Brackets to insure the Acrylic Modesty panel hangs squarely. (Fig. 1)

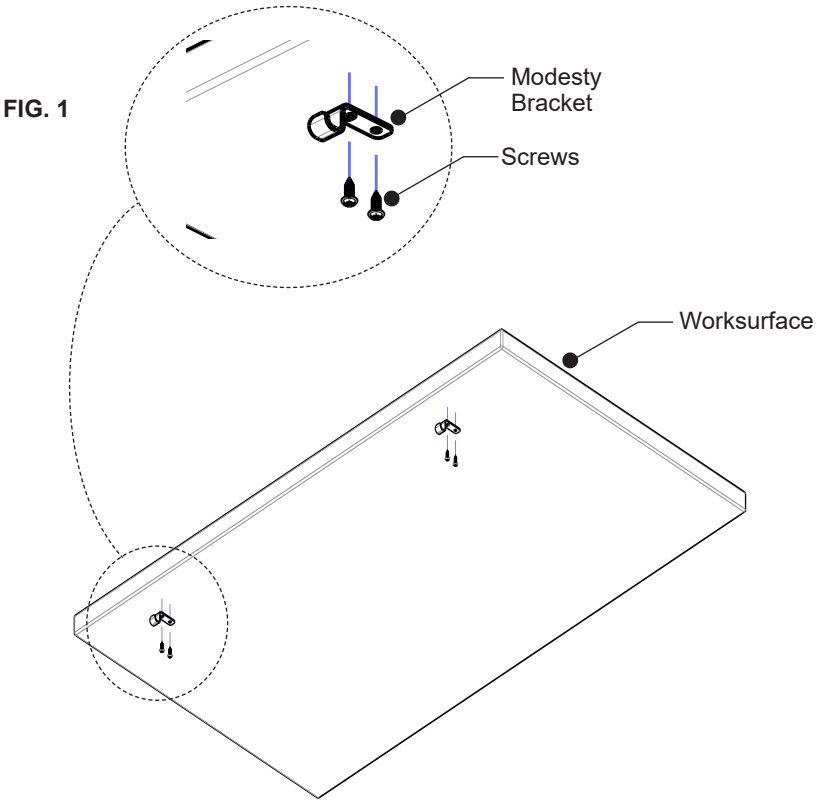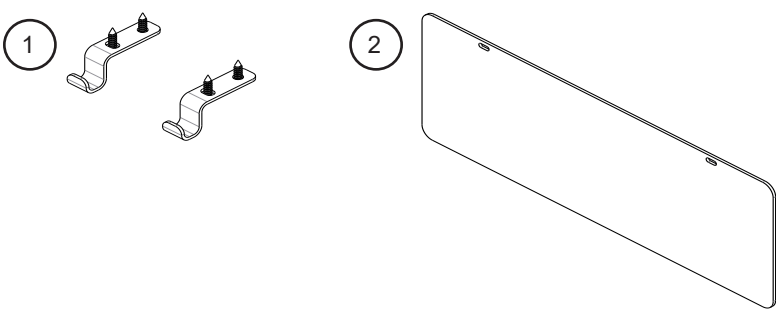

3. Holding the Acrylic Modesty Panel parallel to the worksurface slide the slots on to the Modesty Brackets. **(FIG. 2)** Carefully rotate the Acrylic Modesty Panel downward until it is hanging from the Modesty Brackets in its final position. **(FIG. 3)**

**FIG. 2**

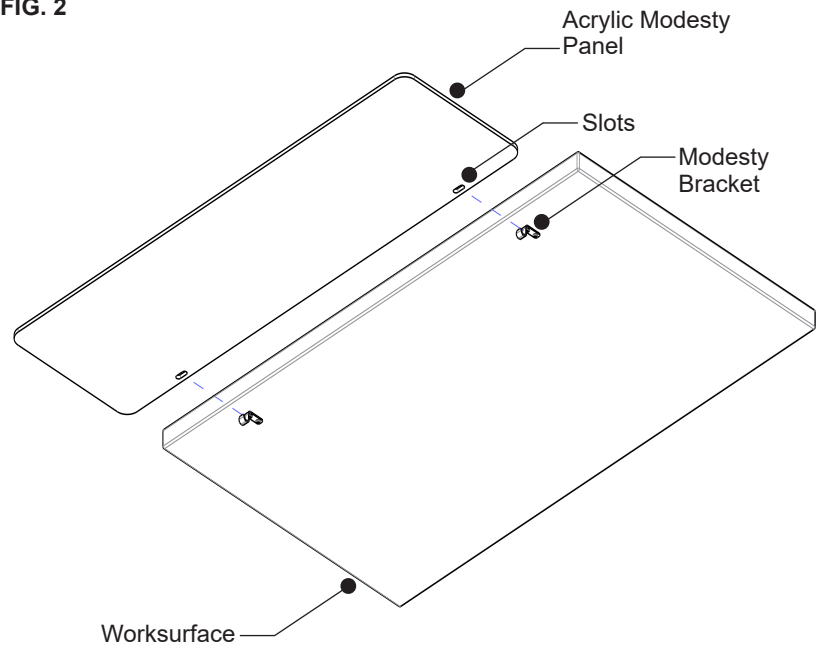

**FIG. 3**

