
CPU Holder

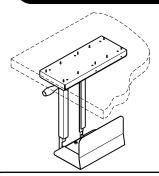


Before starting assembly

Please spend some times to read this assembling and follow the procedures step by step assembly guide.

Some panels are viewed differently from the exploded drawing below. This is for extra clarity. Do not discard any of the packaging until you have checked all the parts and the package of fittings. If you are missing any of the parts, please contact the store from which you purchased your products. The staff will do their best to help you.

1	Parts Check-List					
	Code	Component	Qty			
	01	Top Bracket	1			
	02	Bottom Bracket	1			
	03	Holder	1			
	04	Slider	1			
	05	Slide Support	1			
	06	Handle	1			


	00	- Idiidie	'	_
	Fitting	Check-List		_
	Code	Description		Qty
	07	Screw	{\text{mmn}	10
	80	Screw	I	10
	09	Spacer	9	1
	10	Washer	0	1
	11	Knob		1
	12	Thick Pad	9	2
	13	Round Foam Pad		1 set
(14	Foam Pad		4

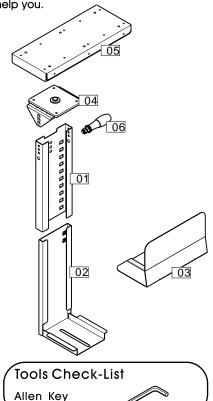

Caution:


Regular cleaning with a clean dry cloth is usually sufficient, but for stubborn marks, wipe over gently with a clean damp cloth. Never use strong detergents or abrasive cleaners as these may damage the surface finish of your furniture. There are many small components used in the construction of this unit. These loose items should be kept away from young children while assembling your unit.

Assembly Guide

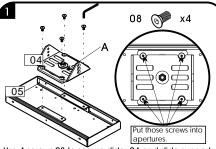


Use 4 screws 08 to secure slider 04 and slide support 05 (as figure). When securing, put those 4 screws into the apertures and use "L" allen key to tighten them.


The tightness for "A" screw originally fixed at 10 kgs, use two open wrench (#13) to adjust proper tightness

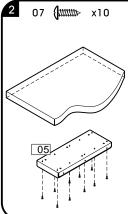



Fit slide support 05 to the underside of your computer desk ensuring it is approximately 15mm back from the front edge, and far enough away from the sides of the desk to enable the CPU to fit under the desk. Using a bradawl mark the screw positions, and secure firmly with screws 07 as shown.

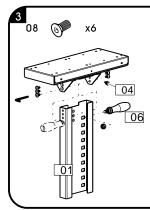

Secure the handle 06 to the top bracket 01 with nut .The handle 06 may be fitted to left or right hand side to suit left or right handed use. Secure the top bracket 01 to the slider 04 with 6 screws 08. Fully tighten with allen key provided.

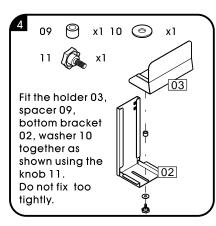

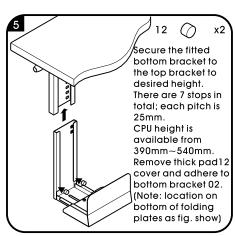

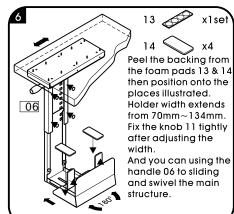

CPUMINI

x1set