



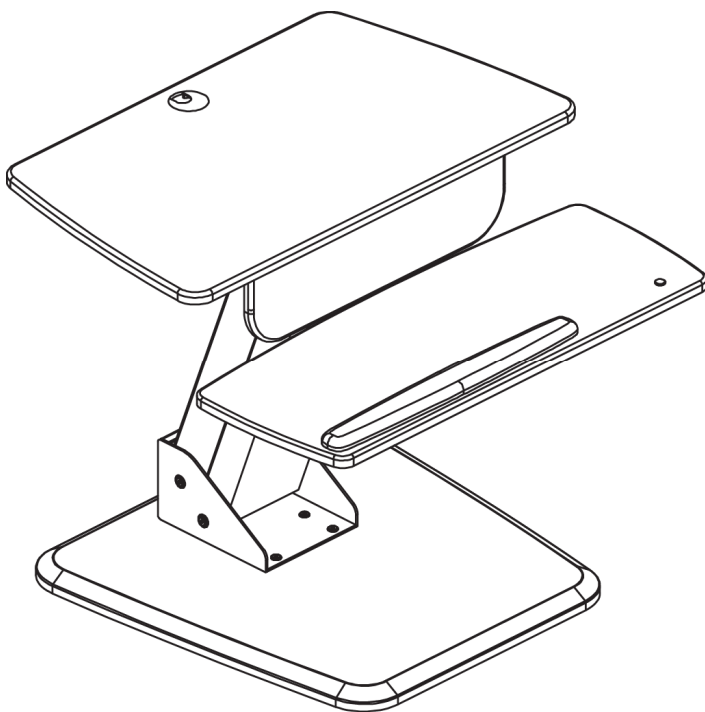

STEP 1

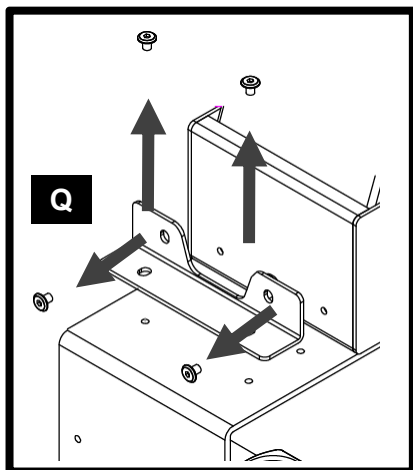


Remove Allen Screws
and Support Bracket
Part L (M6 x 8mm)

M4 – Allen Wrench

J




Replace Long Keyboard Bracket Part
(F1) with Shorter Keyboard Bracket (F2)

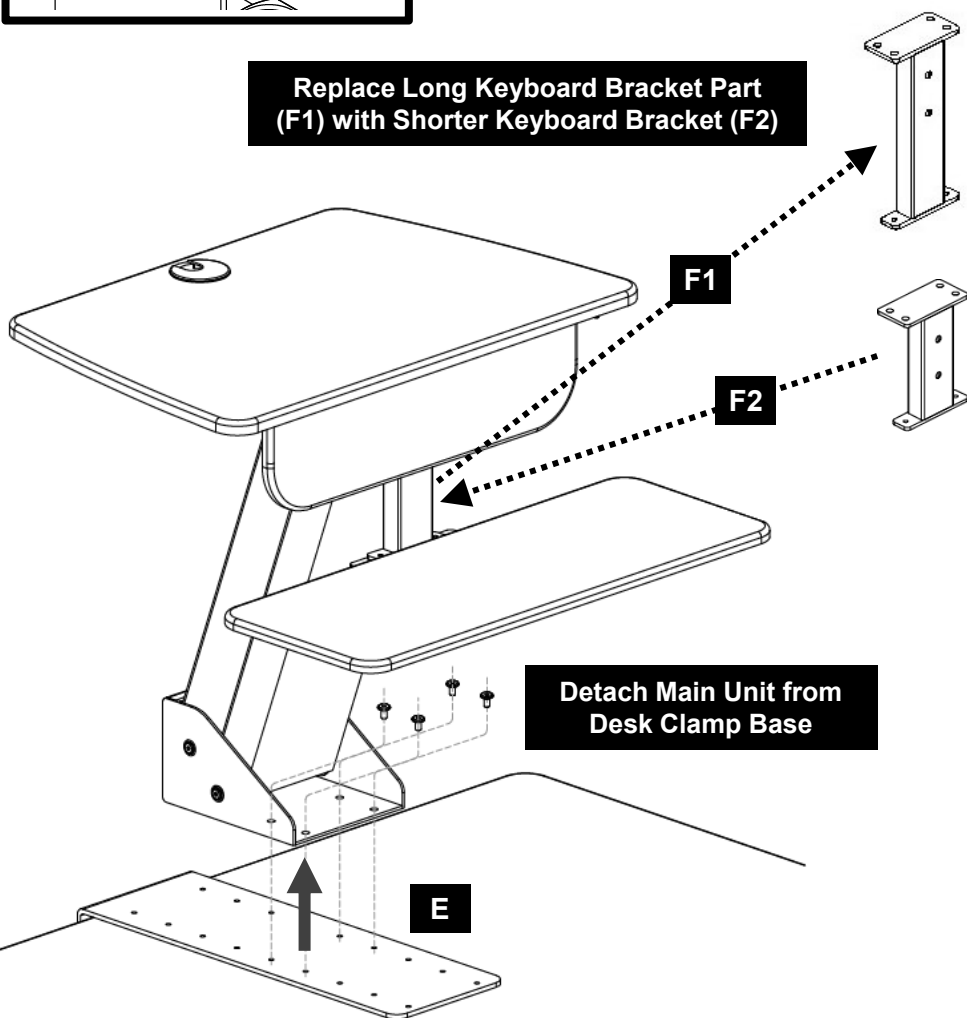


Detach Main Unit from
Desk Clamp Base

E


STEP 2

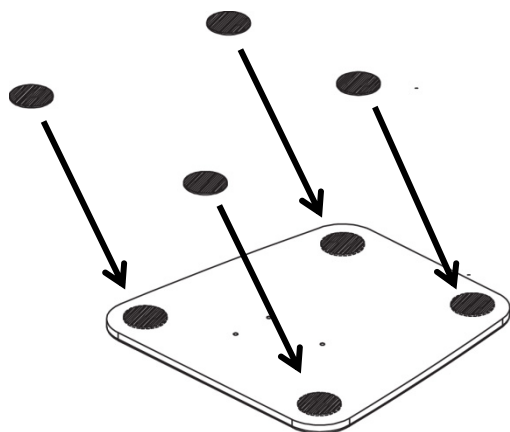

**Install Rubber Pads
on Underneath Base
+ Keyboard Tray**

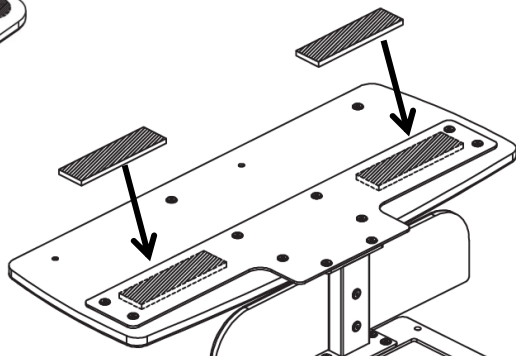

STEP 3

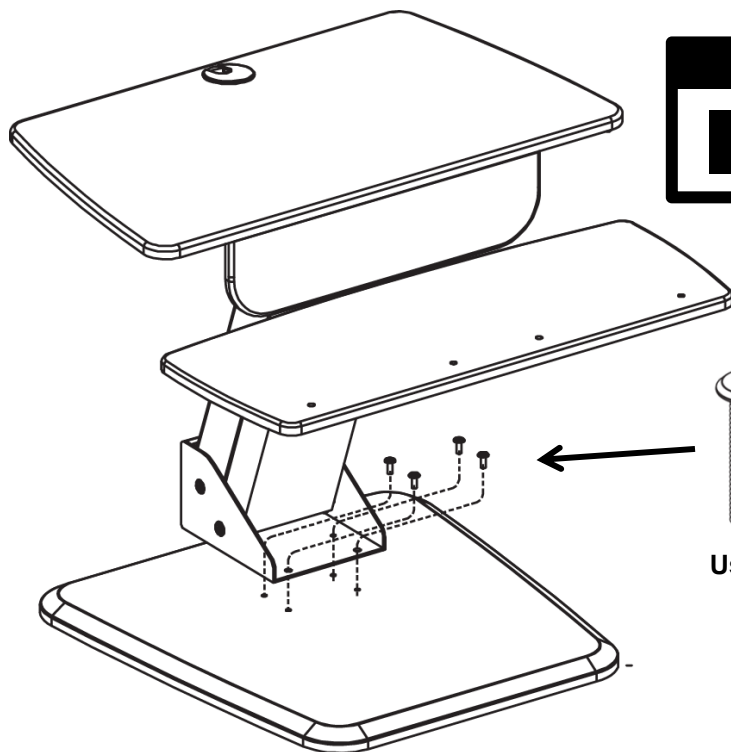

M4 – Allen Wrench

J



**M6 x 25 mm
4 pcs**

**Use Allen Wrench (J)
to Secure Base**



Phone: 1-800-833-3746

Email: customerservice@esiergo.com

Web: www.esiergo.com