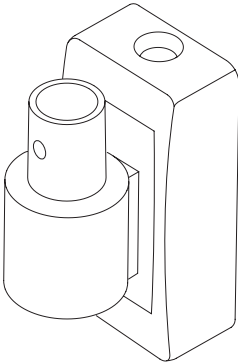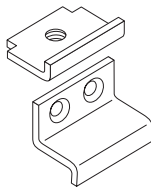# Slat Mount
for Vivid Desktop Lights   **Model SLAT-V-SLV**
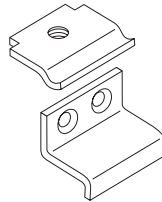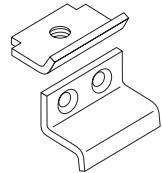
SLAT-V Rev A 5/17

Slat Mount

Clamp Set 1   Clamp Set 2   Clamp Set 3
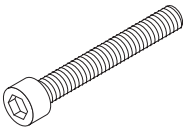
M5x1.0
Nut

M3x0.8x6
Pan Head Screw

M3x0.8x6
Flat Head Screw

M5x1.0x45
Socket Head Screw
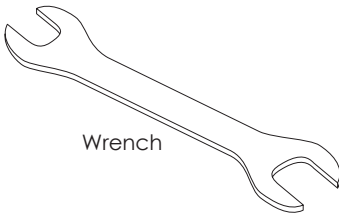
Wrench
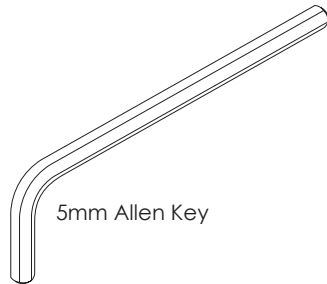
5mm Allen Key

Package Contents: 1 Slat Mount   1 M5x1.0x45 Socket Head Screw
                     1 Clamp Set 1   1 M3x0.8x6 Pan Head Screw
                     1 Clamp Set 2   2 M3x0.8x6 Flat Head Screw
                     1 Clamp Set 3   1 Wrench
   1 M5x1.0 Nut   1 5mm Allen Key

INSTALLATION

STEP 1: CHOOSE CLAMP SET

• Refer to the illustrations below and choose the appropriate set of clamps (1, 2 or 3) to fit the clamp wall. The clamp set number is stamped into both clamps of each set.

Clamp Set **1**

Clamp Set **2**

Clamp Set **3**
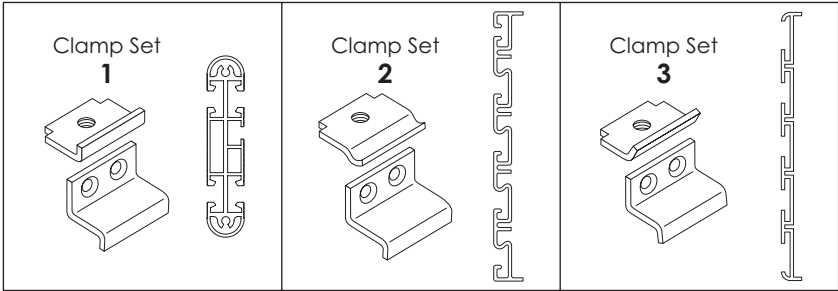
STEP 2: ASSEMBLE SLAT MOUNT

A. Insert the M5 socket head screw into the top hole of the slat mount. Screw it through the threaded hole in the top adjustment plate (top clamp of the set). Orient the top clamp as shown in the illustrations above.

B. Secure the bolt through the center cross member in the slat mount with the M5 nut. Use the provided wrench and 5mm Allen key.

C. Secure the bottom clamp of the set with the two M3 flat head screws using a Phillips screwdriver.

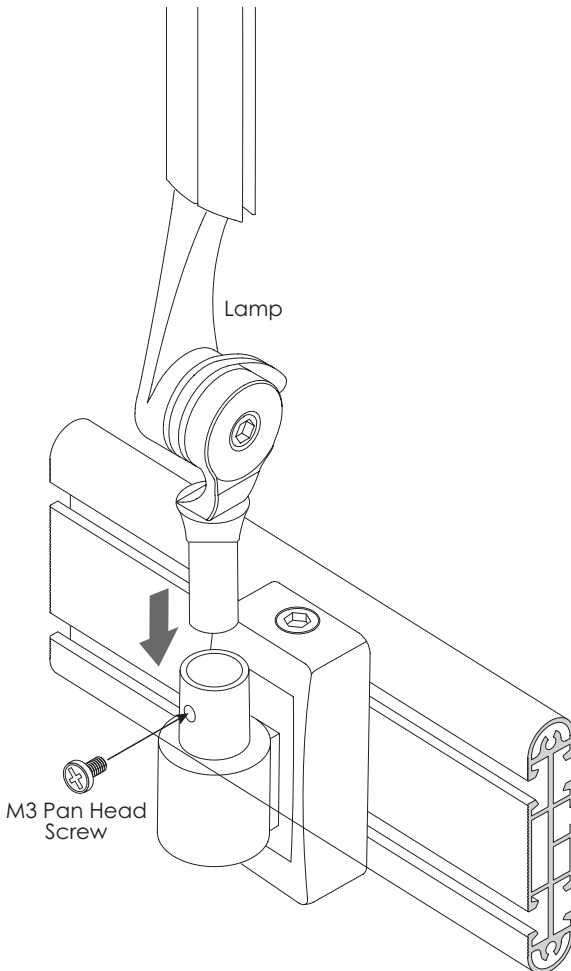Ⓐ Top Clamp

Nut

M3 Flat Head Screws
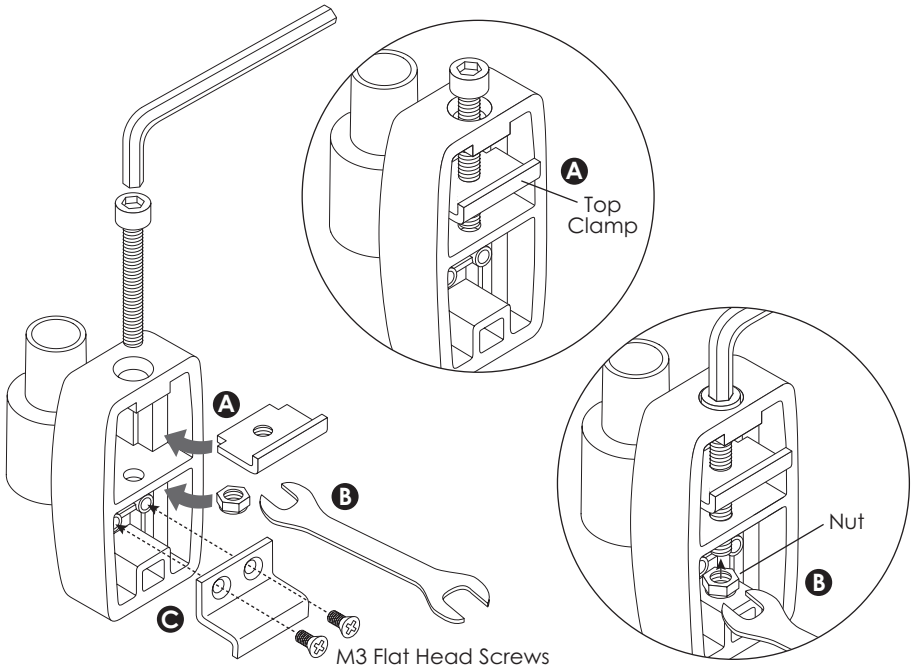
STEP 3: ATTACH MOUNT TO SLAT WALL

- To fit the slat mount into the slat wall, loosen or tighten the M5 bolt to raise or lower the top clamp, as needed.

- Attach the mount securely to the slat wall by tightening the bolt to raise the top clamp.
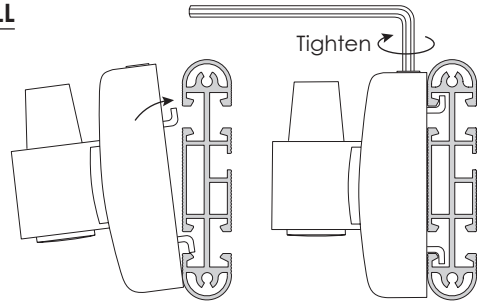
Tighten

STEP 4: INSTALL LAMP

- Insert the bottom post on the lamp into the slat mount.

- Install the provided M3 pan head screw and tighten it to secure the lamp.

Lamp

M3 Pan Head Screw

esi ergonomic solutions

Workplace comfort. **Simplified**

800.833.3746 | esiergo.com