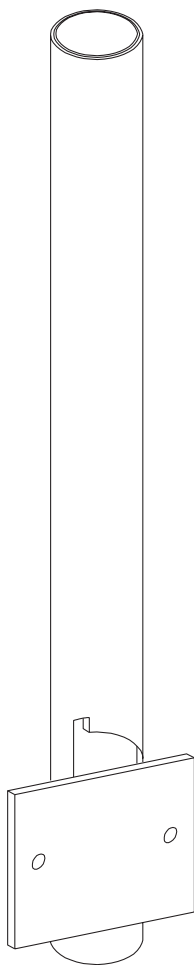


E-AMT

MONITOR ARM ADAPTER
FOR KNOLL® ANTENNA

Model E-AMT-SLV

E-AMT Rev A 10/17



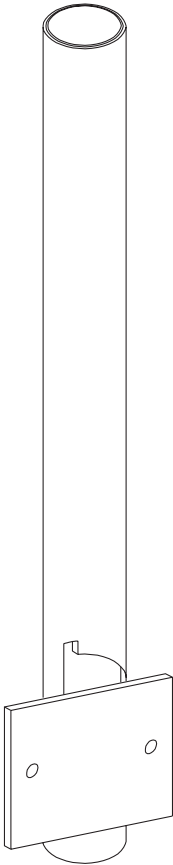
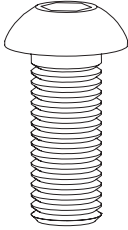
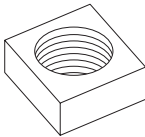
ASSEMBLY / ADJUSTMENT

E-AMT MONITOR ARM ADAPTER

PLEASE REVIEW these instructions before beginning the installation. Check that all parts and tools shown below were provided with your order. Contact your supplier if any parts are missing. Do not discard the packaging until satisfied that the product operates to your satisfaction.

The E-AMT monitor arm adapter enables attachment of select Evolve monitor arms to Knoll® Antenna benching systems. After the E-AMT installation is complete, follow the instructions that came with the Evolve system. The E-AMT can work with the EVOLVE single, dual, or triple configurations.

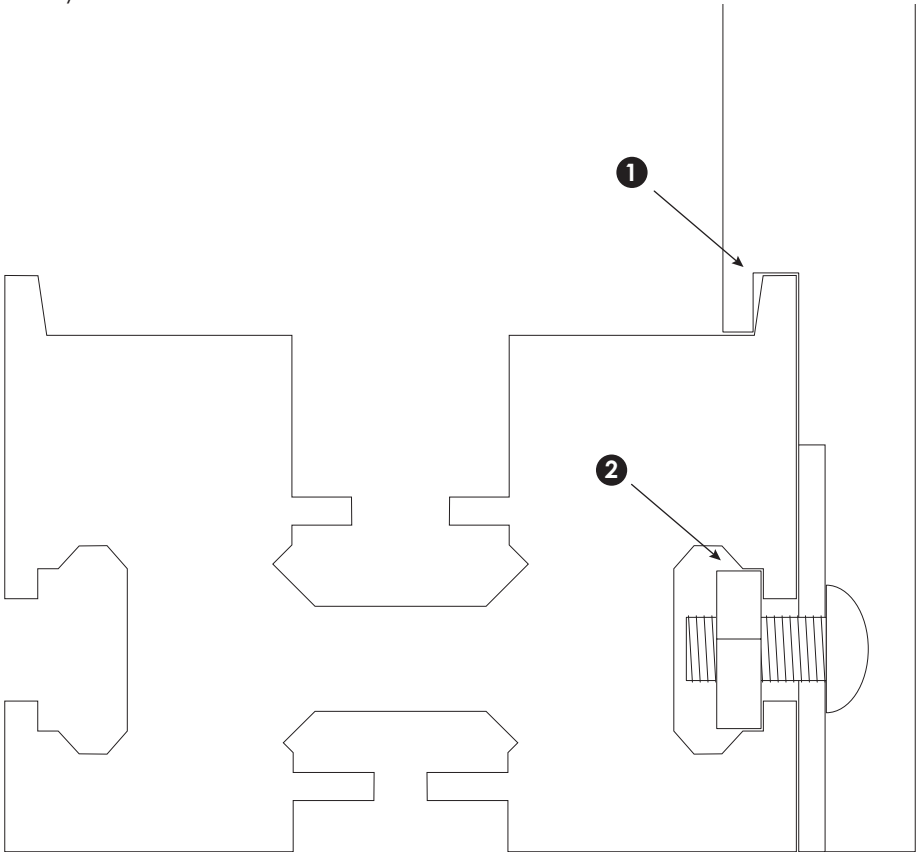
PARTS AND TOOLS PROVIDED

<p>EDGE-AMT Mount (1)</p> 	<p>Button Head Screw (2)</p>  <p>M8x16</p>
	<p>Square Nut (2)</p> 

CAUTION: Hand-tighten screws only. Do **not** use power tools.

Attach Pole Assembly to Table

1. Attach the Edge-AMT assembly to the rear beam rail mount on the Antenna table system. Utilize the pole base end tabs to catch the end of the rail.
2. Insert the two square nuts in the rear rail internal groove and align the holes of the Edge-AMT assembly to the nut holes. Fasten both securely to the Antenna rear beam rail using the button head screws and a 4mm Allen key.

**Proceed with Monitor Arm Assembly**

- Begin by attaching the arm stem(s) on the Edge-AMT and build the remaining Evolve product on the pole. Follow the standard instructions that came with the Evolve system.



800.833.3746 | esiergo.com