

VIVID-LEX

DESKTOP LIGHT

Model VIVID-LEX-SLV

VIVID-LEX Rev A 4/17







SET-UP AND OPERATION

VIVID-LEX

PLEASE REVIEW these instructions before beginning the installation. Check that all parts needed were provided with your order. Contact your supplier if any parts are missing. Do not discard the packaging until satisfied that the product operates to your satisfaction.

PARTS PROVIDED

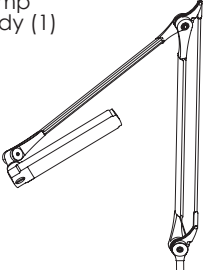

<p>Lamp Body (1)</p> 	<p>Lamp Base (1)</p> 	<p>Power Supply (1)</p> 
<p>Allen Keys</p>  <p>3mm 4mm</p>	<p><u>Additional Tools Required</u></p> <ul style="list-style-type: none">• Philips Screw Driver	

Set-Up

1. Push the bottom post on the lamp body into the lamp base. Tighten the screw to secure the lamp body.
2. Connect the cord from the lamp to the power supply.
IMPORTANT: For proper operation, the jack from the lamp must be securely inserted into the connector from the power supply.
3. Plug the power supply into a standard 115V AC wall outlet.


Operation

4. Tap the switch to turn on the lamp to the desired intensity.
 - Tap once for maximum light intensity.
 - Tap again for approximately two-thirds intensity.
 - Tap again for approximately one-third intensity.
 - Tap again to turn off the lamp. (The lamp will turn off automatically after eight hours of use.)
5. To direct the light as desired, bend the jointed arms and lamp head in three areas: (1) at the base (2) where the two arms meet, and (3) where the lamp head meets the upper arm.
NOTE: Two Allen keys (2.5mm and 4mm) are provided with your order to adjust the tension at the joints, if desired.
6. Swivel the lamp head and swivel the assembly at the base to further direct the light as desired.

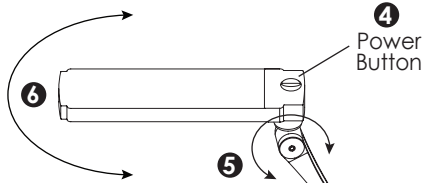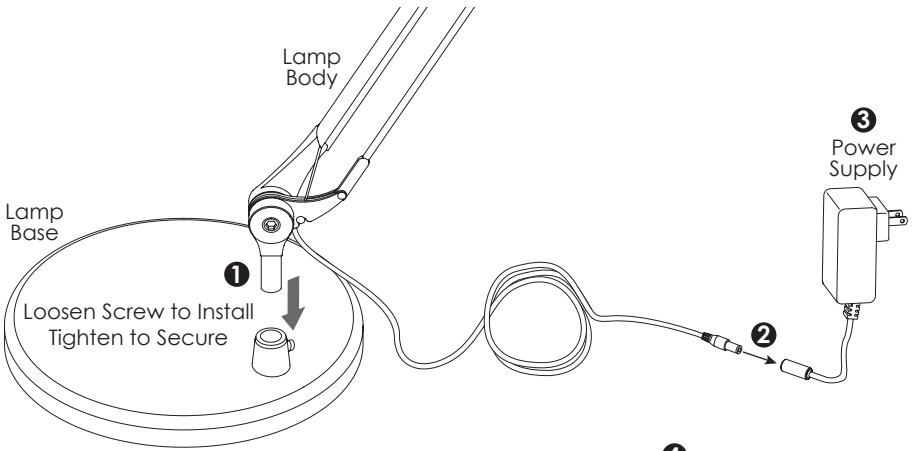

Specifications

- Power consumption: 6W
- Lumens (maximum): 356
- Color temperature: 3500K
- CRI: 85
- Lamp life: 50,000 hours
- Cord length: 7 feet

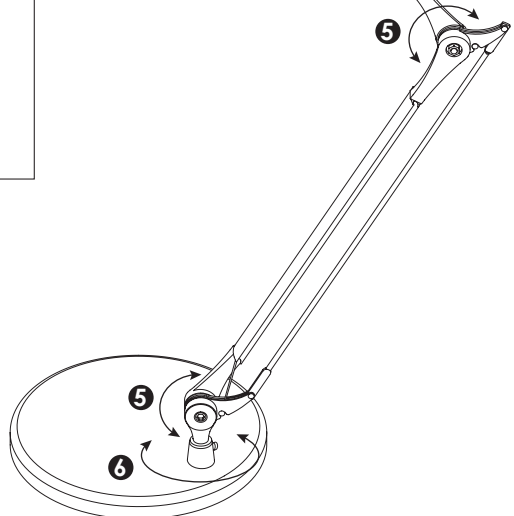



800.833.3746 | esiergo.com