

PL215 KEYBOARD PLATFORM

Model PL215

Instructions

PL215 Rev A 4/17




INSTALLATION AND USE

PL215 KEYBOARD PLATFORM

PLEASE REVIEW these instructions before beginning the installation. Check that all parts needed were provided with your order. Contact your supplier if any parts are missing. Do not discard the packaging until satisfied that the product operates to your satisfaction.

PARTS PROVIDED

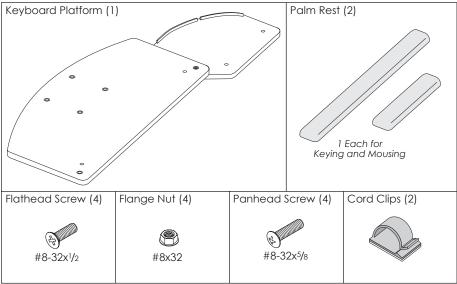

CAUTION: Hand-tighten screws only. Do **not** use power tools.

ADDITIONAL TOOLS REQUIRED

- Phillips screwdriver
- 3/8" Wrench
- 1/8" Allen key (if changing mouse sides)


STEP 1: Attach Palm Rests

- Attach the palm rests to the keyboard and mouse platforms. Use the #8-32x⁵/8 panhead screws and a Phillips screwdriver.
 - Attach each palm rest with two screws, as shown.

NOTE: The right-side mouse platform can be switched to the left side.


First, remove the mouse guards. Then uninstall

the palm rest from the mouse and keyboard platform. Using a 1/8" Allen key and a 3/8" wrench remove the screw and Acorn nut holding the mouse platform. Turn the mouse platform and re-install the mouse guards and mouse platform on the left side. Then Install the palm rests.

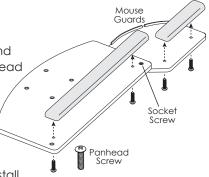


STEP 2: Attach Keyboard Platform

• Attach the keyboard platform to the keyboard arm and track assembly using the four flathead screws and flange nuts.

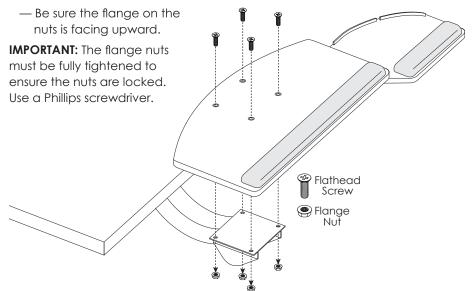


STEP 3: Manage Cables

• Adhere cord clips to the underside of the keyboard platform as needed to organize the keyboard and mouse cables.

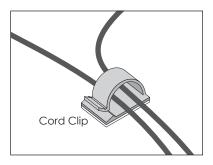

Operation

Swivel the mouse platform out to use it. Swivel it under the keyboard platform to conceal it.



TO OPERATE THE KEYBOARD ARM, follow the instructions on the keyboard arm or the instructions included with the installation procedures for the product.



800.833.3746 | esiergo.com