


WOW01

Workstation On Wheels

Model WOW01

WOW01 Rev A 11/17

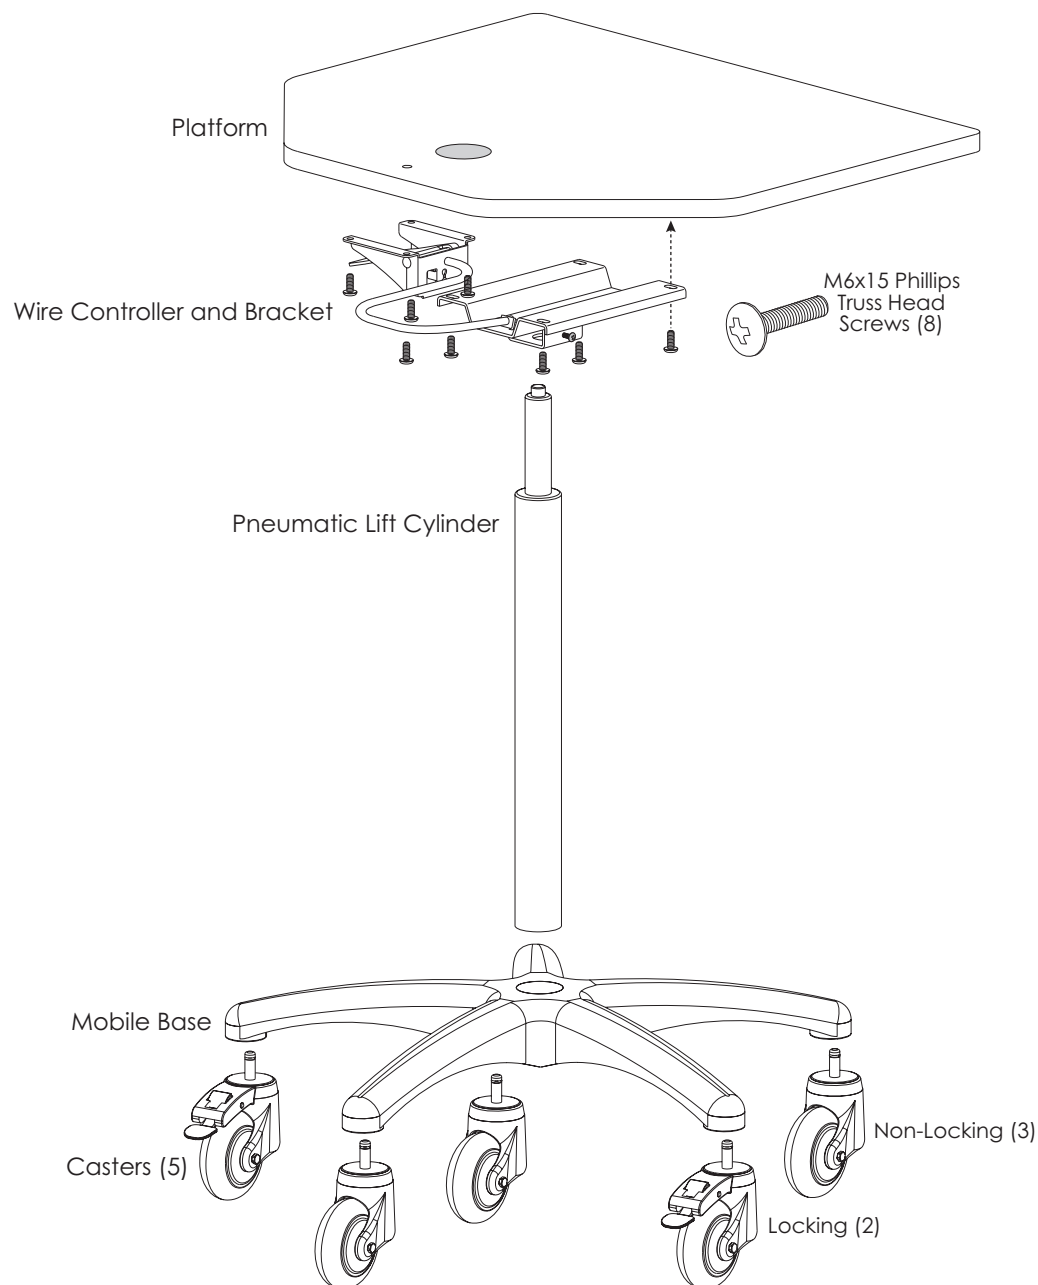

ASSEMBLY AND OPERATION



PLEASE REVIEW these instructions before beginning the assembly procedures. Check that all the parts and tools shown on the cover were provided with your order. Contact your supplier if any materials are missing. Do not discard the packaging until content that the product operates to your satisfaction.

TOOLS REQUIRED

- #2 and #3 Phillips screwdrivers

STEP 1: Attach Casters to Base

- Push casters into the holes at the end of each of the five legs. They snap securely in place.
 - Do not install the two locking casters next to one another.

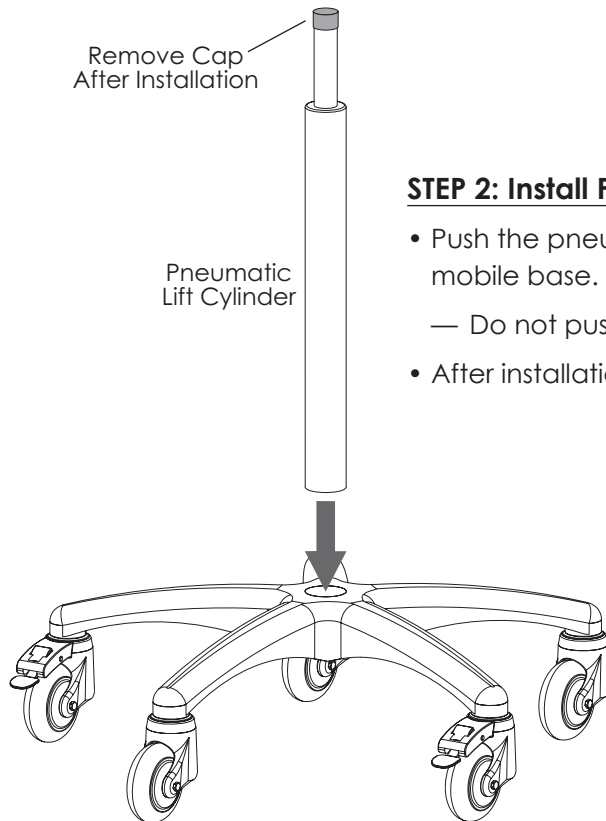
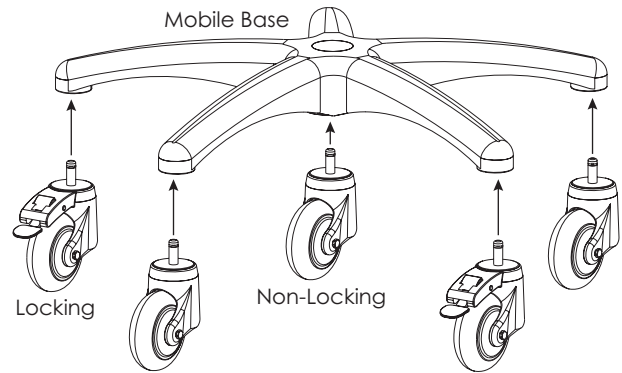


STEP 2: Install Pneumatic Lift Cylinder


- Push the pneumatic lift cylinder into the hole in the center of the mobile base. It snaps securely in place.
 - Do not push down on the top of the cylinder.
- After installation, remove the cap from the top of the cylinder.

STEP 3: Attach Wire Controller and Bracket to Platform

- Attach the wire controller and bracket to the bottom of the platform using the 8 M6x15 Phillips truss head screws.
 - The screws fit into threaded holes on the bottom of the platform.
 - The wire controller may be attached on either side of the platform depending on which side the user wants the pneumatic cylinder control lever.
- Note the location of the two set screws on each side of the bracket mounting hole. You will need to tighten these screws after installing the platform on the cylinder.

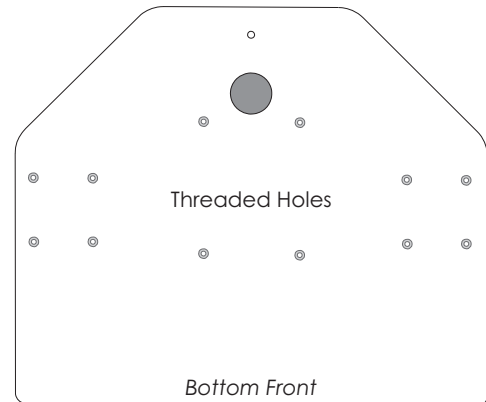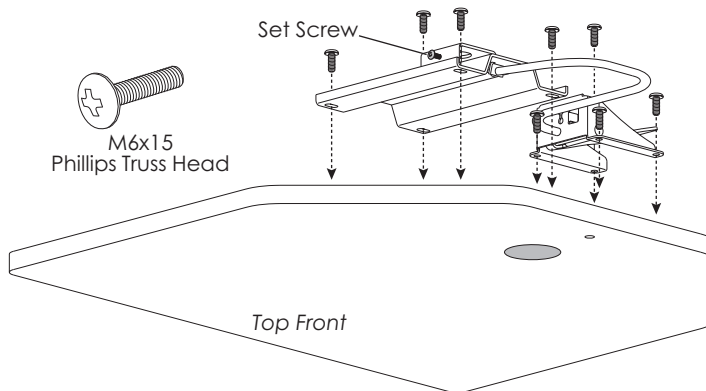**STEP 4: Install Platform on Pneumatic Lift Cylinder**

- Push the platform onto the top part of the pneumatic lift cylinder.
 - Do not push it down so far that it presses down on the white button that activates the lift cylinder.
- While holding the platform with both hands, test operation by squeezing up the control lever.
 - This should activate the lift cylinder, allowing the platform to raise easily and be pushed down.
 - When the lever is released, the platform should hold its position.
- When operation is satisfactory, tighten the two set screws on each side of the bracket mounting hole to secure the platform in place.

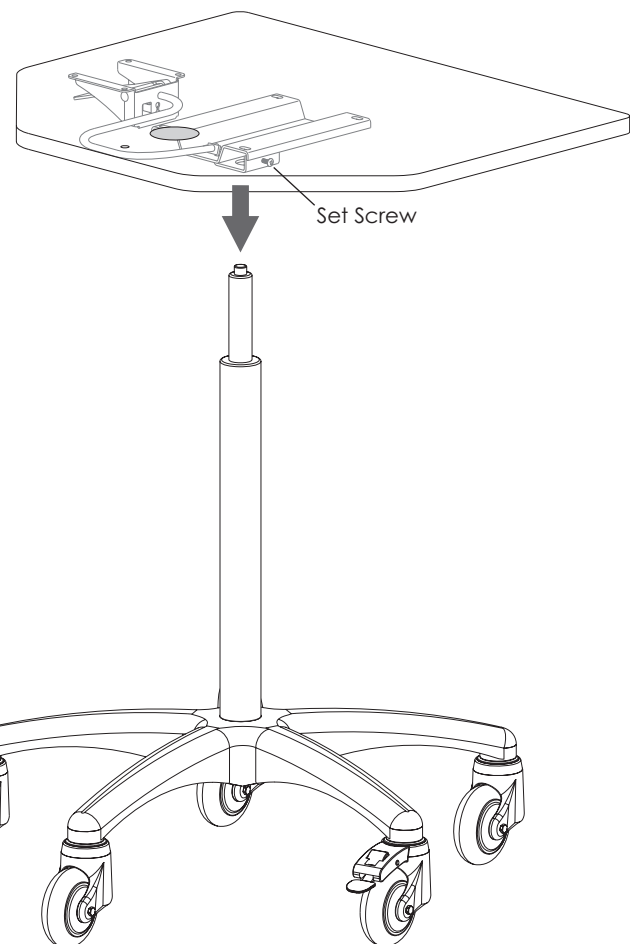**Operation**

- Squeeze the control lever to activate the lift cylinder, allowing the platform to be raised and lowered easily.
- Release the lever to hold the platform in its current position.



800.833.3746 | esiergo.com