


Model LIFT-SLV

LIFT Rev A 3/17

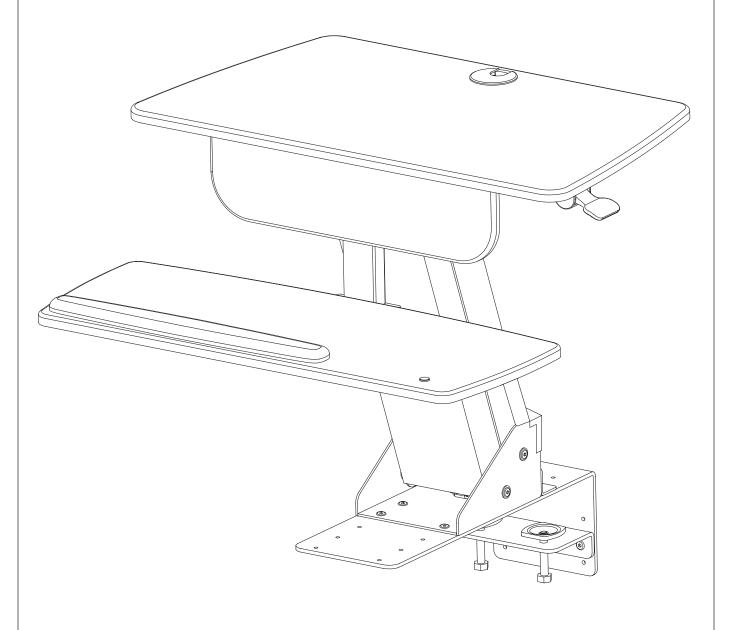


ASSEMBLY AND ADJUSTMENT

LIFT ERGORISE PARTS AND TOOLS

PLEASE REVIEW these instructions before beginning the assembly and adjustment procedures. Check that all the parts and tools listed below were provided with your order. Contact your supplier if any materials are missing. Do not discard the packaging until satisfied that the product operates to your satisfaction.

PARTS AND TOOLS PROVIDED

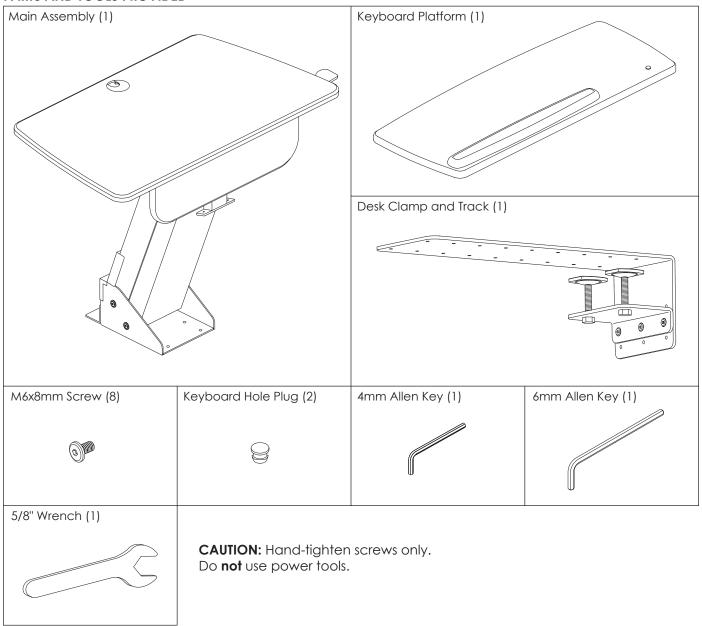




WARNING: When you first squeeze the paddle lever to operate this product, there is no load on the unit. Firmly hold the column base to control the rate of movement. Take appropriate precautions to avoid pinching or otherwise injuring yourself.

ASSEMBLY LIFT

Change Side of Keyboard Palm Rest, If Desired


By default, the keyboard palm rest is on the left side for a right-side mouse. If desired, it may be changed to the right side for a left-side mouse.

- Using the 4mm Allen key, remove the screws holding the palm rest from the underside of the keyboard platform. Remove the plug from the far right-side hole.
- Re-install the screws to attach the palm rest to the right side of the keyboard platform. Use one of the new plugs provided to conceal the exposed left-side hole.

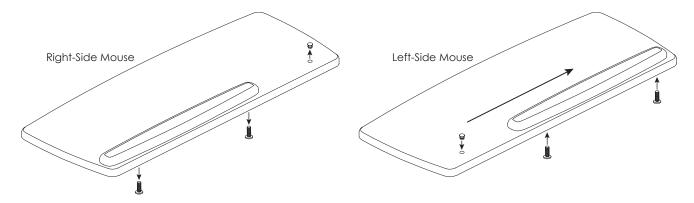

Attach the Keyboard Platform

- Position the product with the top platform on the work surface and the column base to the rear.
- Using the 4mm Allen key, attach the keypad with two M6x8 screws, as shown. Tighten securely.

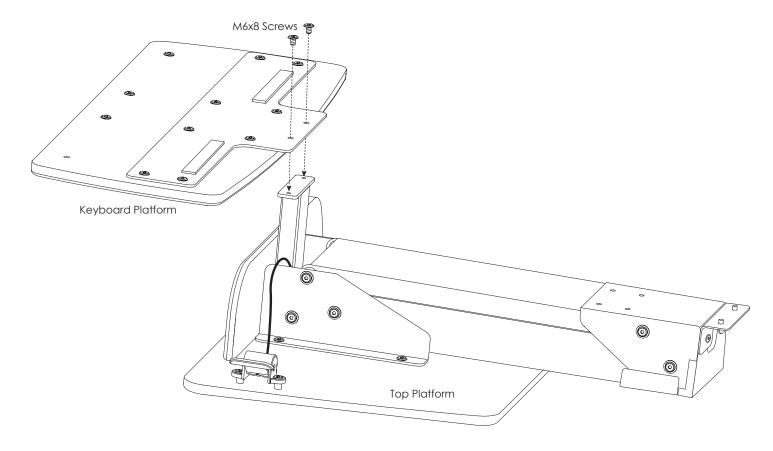


LIFT ASSEMBLY

Change Side of Paddle, If Desired

By default, the paddle is attached to the right side of the top platform. If desired, it may be changed to the left side. Holes are pre-drilled on the left side for your convenience.

- Use the 4mm Allen key to remove the paddle from the right side of the top platform.
- Re-attach the paddle to the left side of the platform.

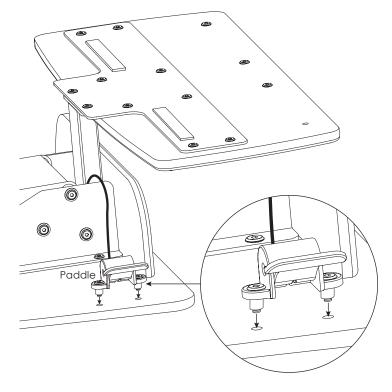

Attach the Desk Clamp and Track to the Work Surface

The desk clamp requires 4" of clearance under the work surface for attachment. The clamp accommodates work surface thicknesses from 3/4" to 3.3" (20mm to 80mm).


Adjust Clamp, If Necessary

- The clamp as shipped can be attached to work surfaces from 1¾" to 3.3" thick.
- For thinner work surface thicknesses, the three screws on the clamp portion may be removed and the clamp re-attached in one of the other three sets of holes. Each set of holes is 1" apart.

Attach Clamp

- Position the clamp at the desired location, with the back of the clamp flush against the back of the work surface.
- Use the provided 5/8" wrench to tighten the clamp bolts.

IMPORTANT: Be sure the clamp is securely tightened.

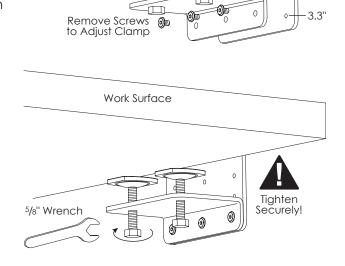

ASSEMBLY

Attach Main Assembly to Clamp Track


To attach the main assembly, the column must first be raised. The unit is then turned over, positioned on the track, and screwed in place.

Raise Column

- Place your hand on the end of the column to control the rate of movement.
- Depress the paddle lever. Feather it to further control the rate of movement.




WARNING: Stand well away from the path of column movement. The column could raise quickly and suddenly, potentially causing injury.

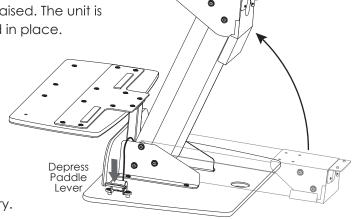


Position Base of Column on Clamp Track

The position of the column base varies depending upon work surface depth. See illustrations.


- Turn the main assembly over so that the base is on the bottom.
- Position the base toward the front of the track with deeper work surfaces.
- Position the base toward the rear of the track with shallower work surfaces. Allow at least one set of two holes to remain exposed at the rear of the track for attachment of the support bracket.

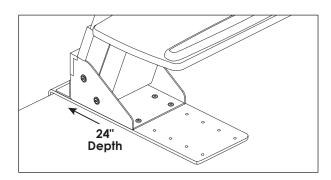

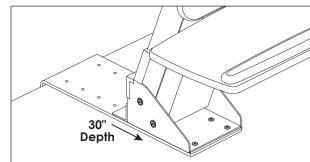

Attach Base of Column to Clamp Track

- Use four of the M6x8mm screws to attach the base, as shown.
- Tighten the screws using the 4mm Allen key.

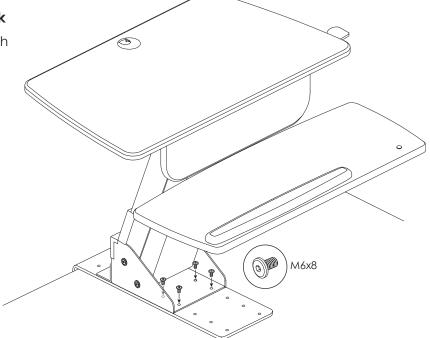


LIFT ASSEMBLY

Test Operation

• Place the monitor and other equipment that will be used with this product on the top platform and keyboard platform.

• Depress the paddle lever. Raise and lower the unit through its full range of movement.

• Position the unit so the column is at a 45° angle.

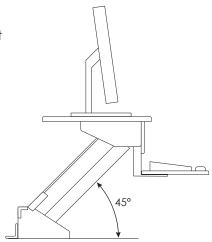


If Necessary, Adjust for Load Weight

This adjustment can be used to maximize ease of operation. When operating this product, the platform should move easily to any position and hold that position.

- If the platform is difficult to raise or lowers too easily, increase the load adjustment (+).
- If the platform is difficult to lower or raises too easily, decrease the load adjustment (-).
- Use the 6mm Allen key to turn the adjusting screw counterclockwise to increase load, clockwise to decrease it.
- Test operation and re-adjust as necessary.

CAUTION: Do not over-tension the MAX (+) adjustment.

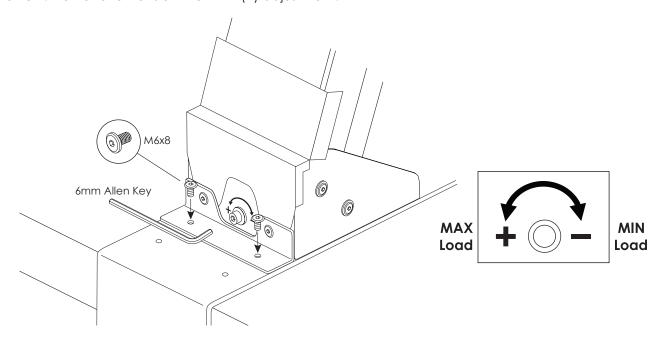



800.833.3746 | esiergo.com